 
 


Cassette Deck



Button
Cut 5 of gray

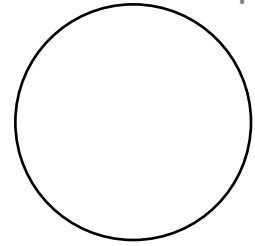

**Speaker Layer 3/
Large Knobs**
Cut 2 of white, 2 of gray

**Deck Window/
Upper Panels**
Cut 2 of gray, 1 of blue

Boom Box Bag

www.cholyknight.com

Side Tabs

 
Cut 2 of contrast fabric
3/8" seam allowance

Boom Box Bag

www.cholyknight.com

Handle Tabs

Cut 8 of contrast fabric
3/8" seam allowance

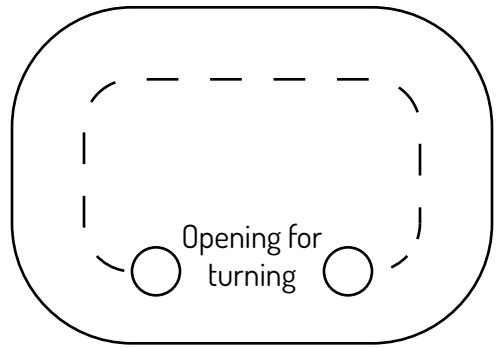

Boom Box Bag

www.cholyknight.com

Top/Handles

Cut 4 of main fabric

Cut 2 of lining

 
 
1/2" seam allowance (top)

1/4" seam allowance (handles/strap)

For Strap

Chain this pattern from end to end 3 times making one long strip.

This creates the strap pattern.

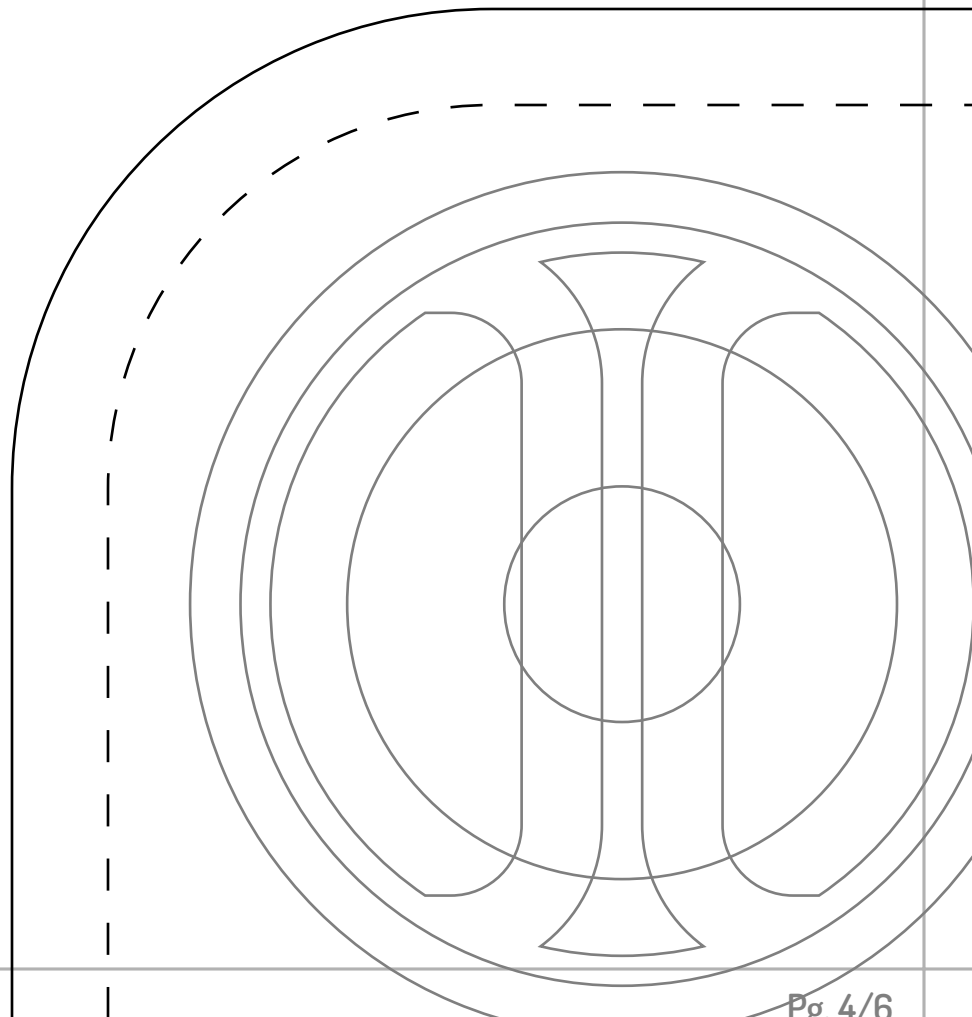

A1 A2

 
 
 
B1 B2

Boom Box Bag

www.cholyknight.com

Bottom

Cut 1 on fold of main fabric
Cut 1 on fold of lining
1/2" seam allowance

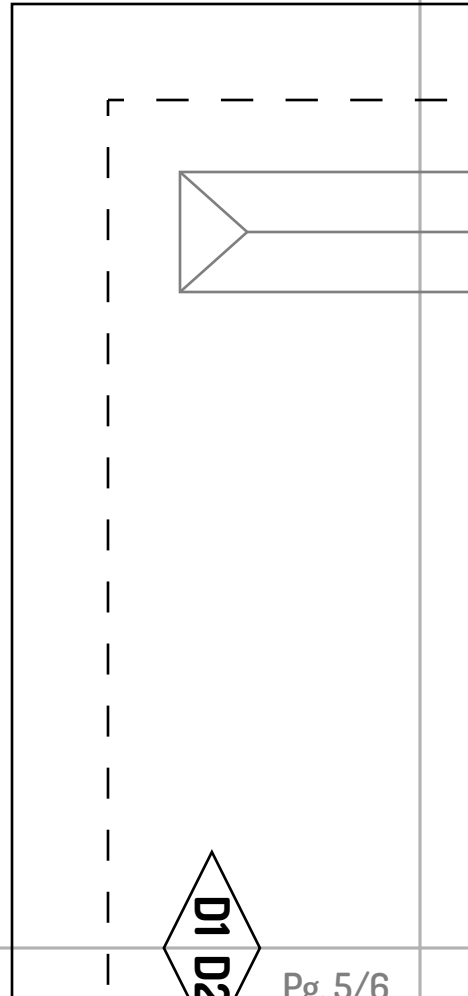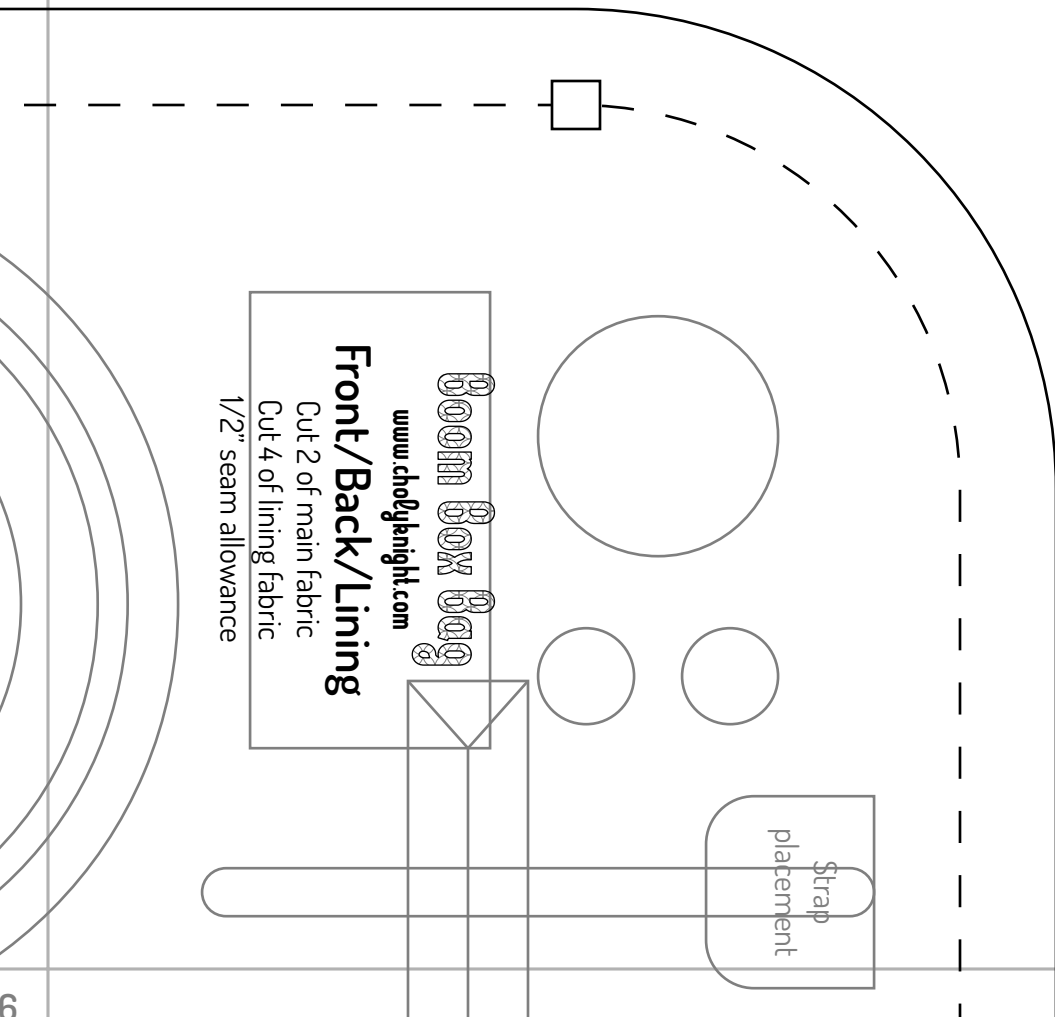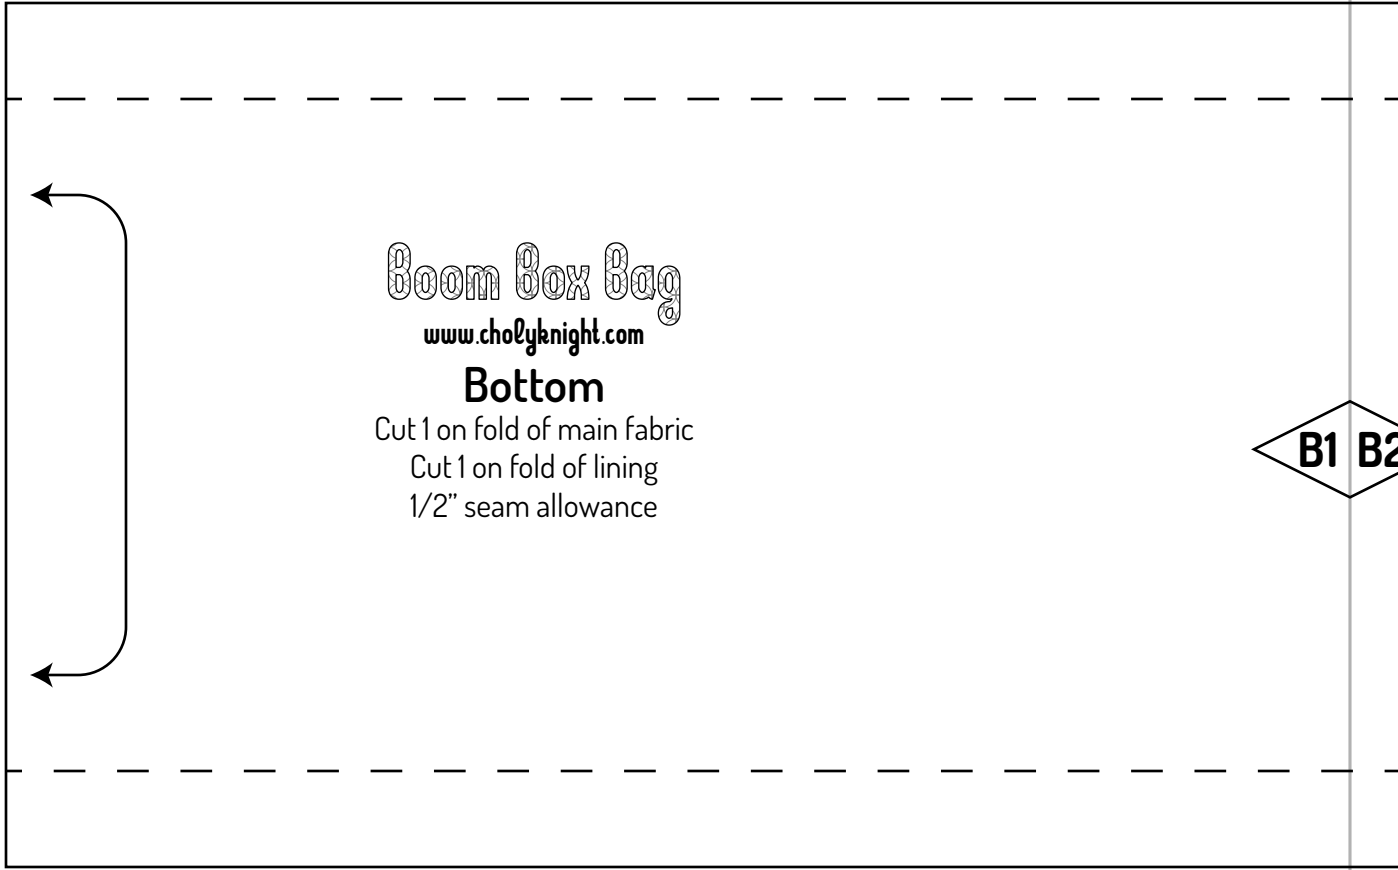

D1 D2



Boom Box Bag

 
 
 
 
www.cholyknight.com

Back Pocket

Cut 2 of lining
1/2" seam allowance





C1 C2

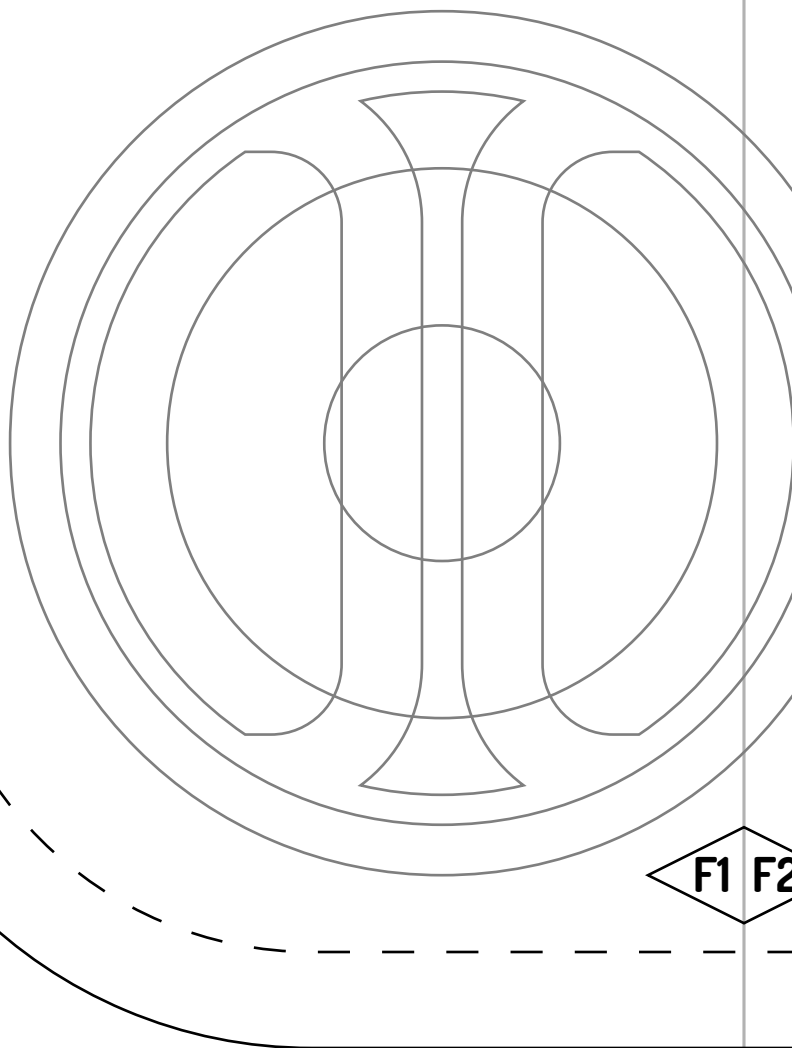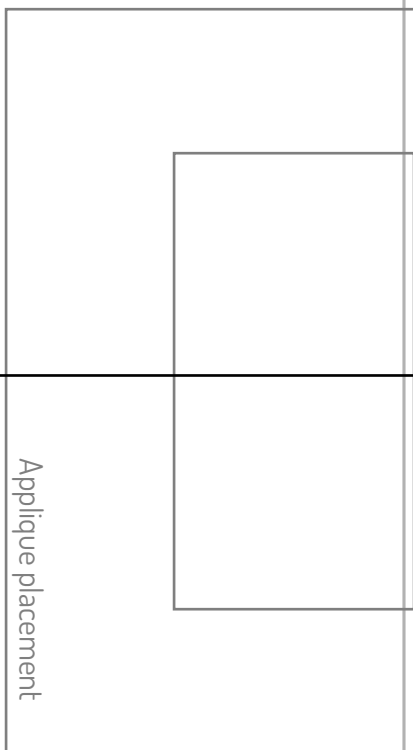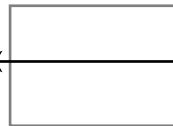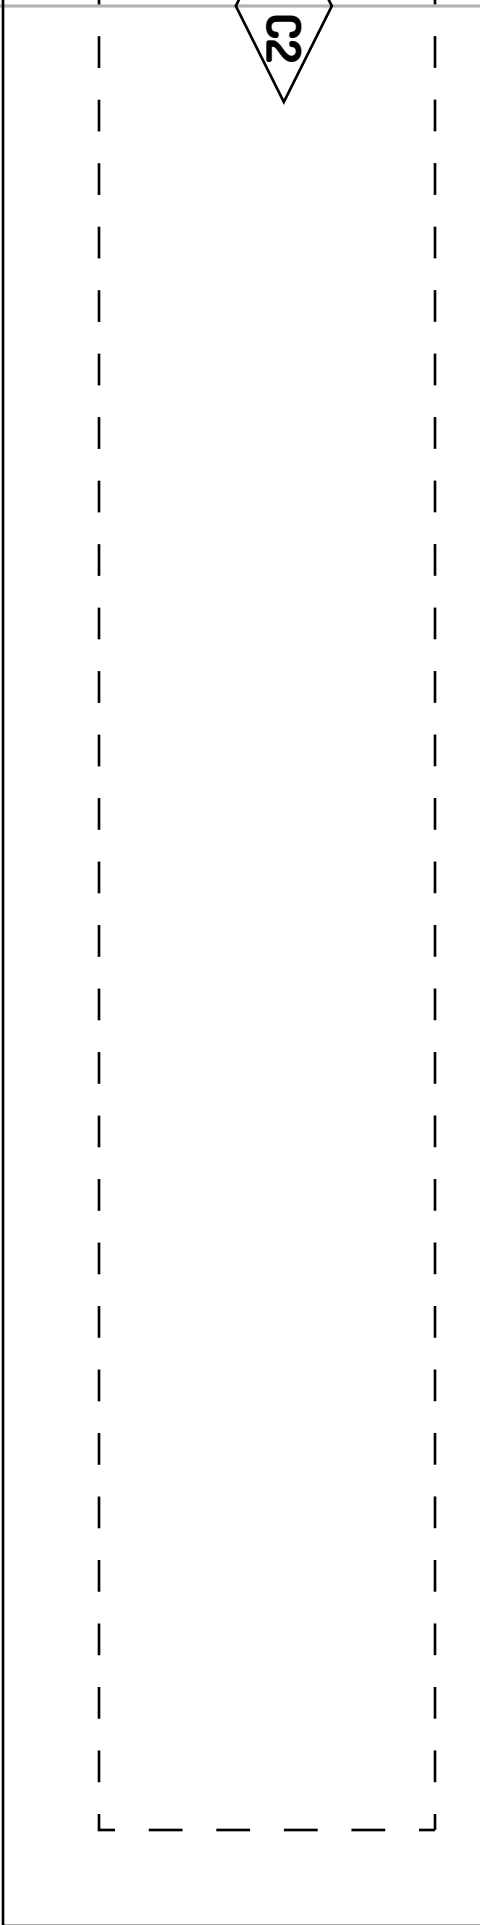

F1 F2




  F1 F2

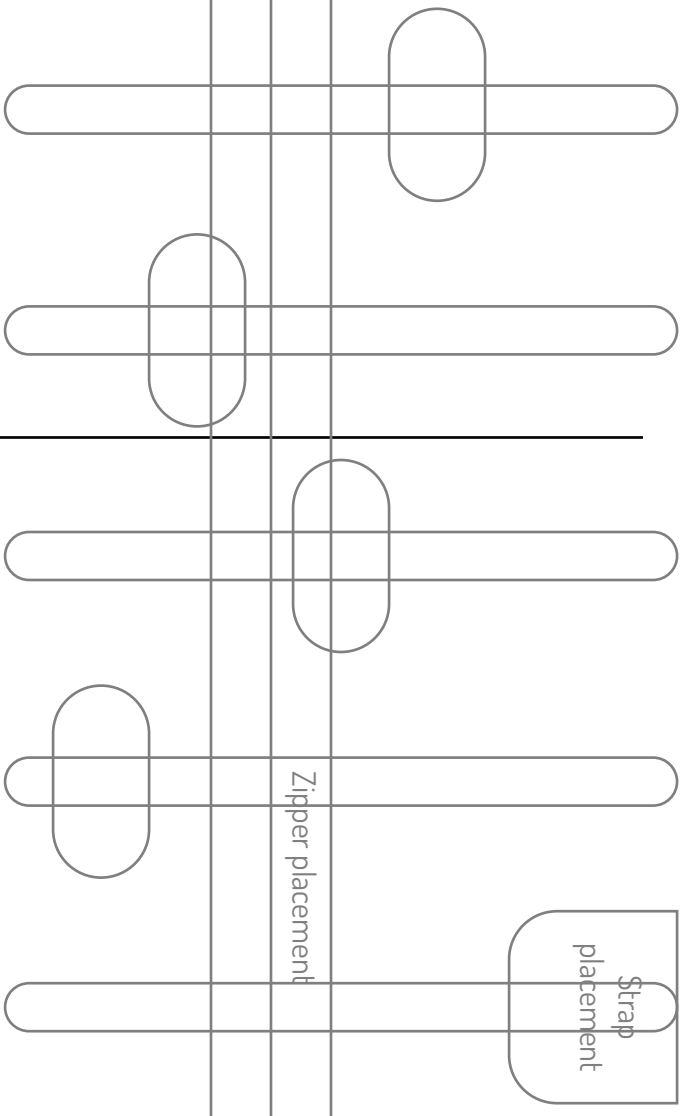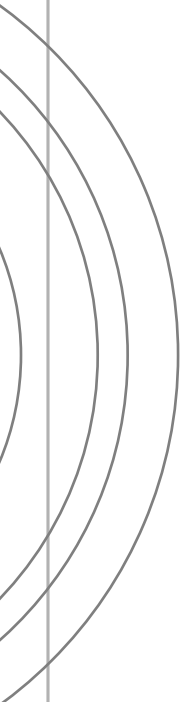

Zipper placement

 Strap placement

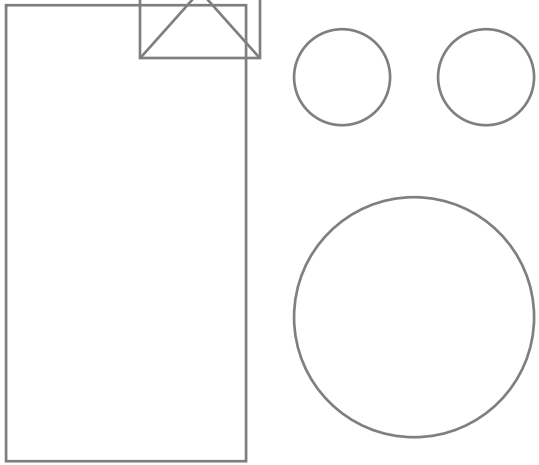

ent

D1 D2

Cassette Deck
Cut 1 of gray

 
Speaker Layer 1
Cut 2 of black

G1 G2







Sliding Knob
Cut 4 of contrast fabric

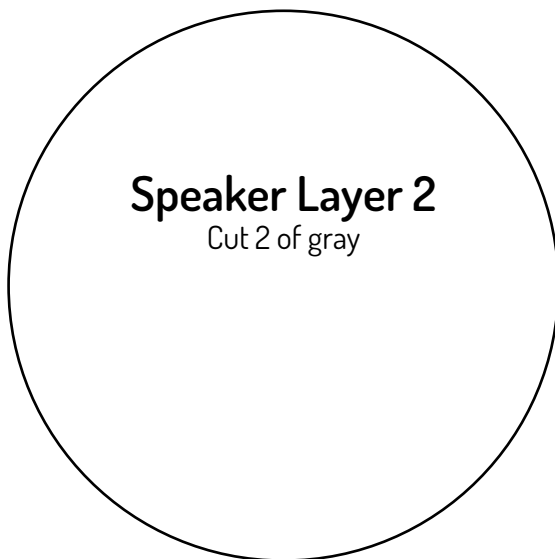


Speaker Layer 2
Cut 2 of gray

 


Small Knob
Cut 4 of black

 

Bar
Cut 6 of black

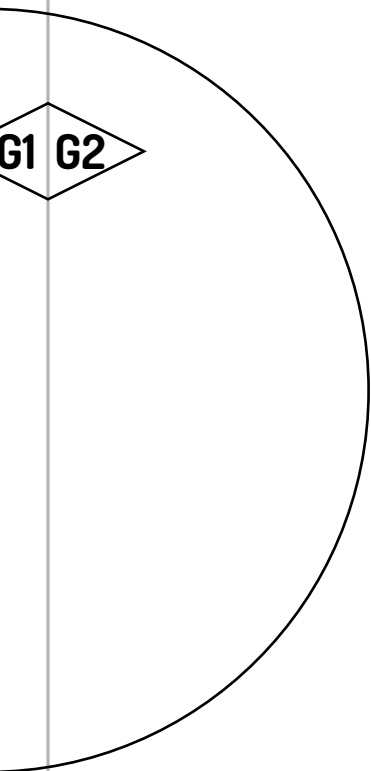 

G1 G2

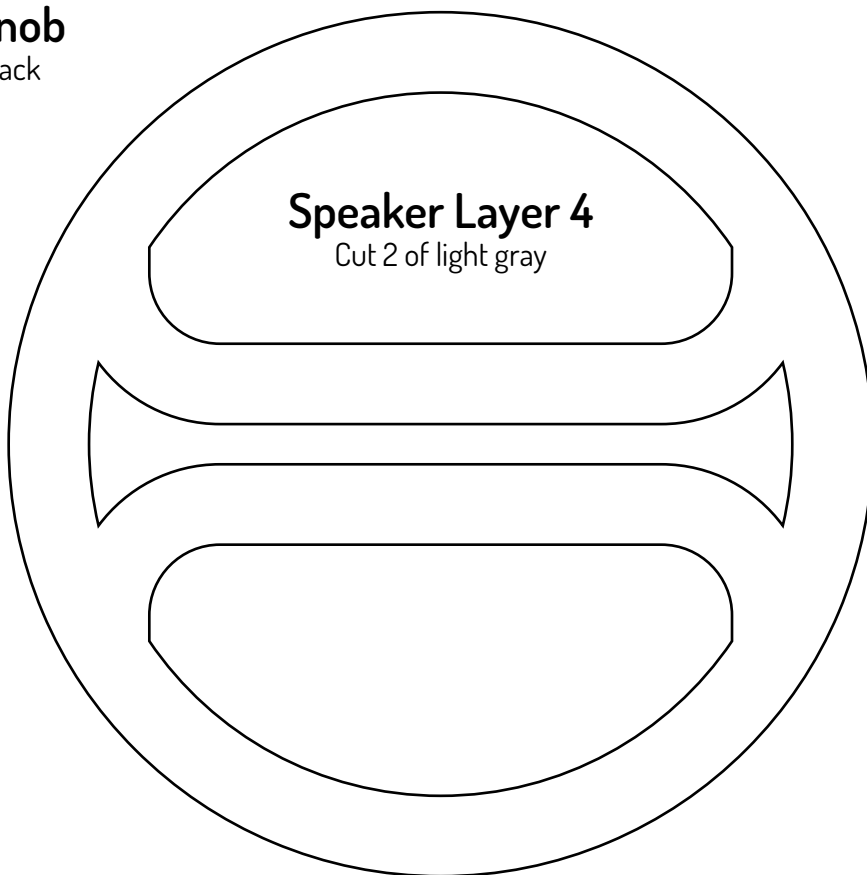 

Speaker Layer 4
Cut 2 of light gray